


# Adjustable Knife Sharpener Instruction Manual

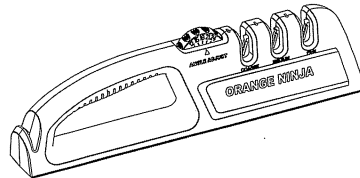

## Instructions:

1. Place the adjustable angle knife sharpener on a flat and stable surface while using.
2. Set the sharpening angle by rotating the angle adjustment knob and turning to the desired angle. If the factory angle is unknown, use the angle chart printed on the product.
3. Insert the knife blade into the sharpener "coarse" setting slot at the base. The base of the blade is also called the heel of the blade.
4. Use gentle force, pushing the blade down while pulling the knife back through the slot. Repeat this action 5 to 8 times, 5 for a mildly-dull blade or more for a severely-dull blade.
5. After pulling the blade through the "coarse" setting, run the blade on the "medium" setting 3 to 5 times or more if required.
6. Finally, refine the edges by running the blade on the "fine" setting for 3 to 5 times.
7. To sharpen the scissors, use the ceramic rod located at the tail end of the sharpener. Put the base of a scissor blade into the tail end setting slot, then pull back 3-5 times or more if required.
8. Use warm, soapy water to rinse away any lingering steel remnants before using your knife again. Dry the knife off completely to prevent rusting and return it to its knife block or similar storage space.



## Caution :

- This sharpener is incompatible with ceramic knives.
- Do not put the sharpener in the dishwasher and keep it out of children's reach.
- Don't Push and Pull your knife back and forth. Use one direction pull-through motion.
- Don't apply downward pressure.
- The ceramic and metal blades may turn black as a result of normal wear and tear which is normal.

**Download detailed E-BOOK with pictures & VIDEO, using this below link:**

[www.sharppebble.com/5Angle](http://www.sharppebble.com/5Angle)

For more information or queries, email us at: [support@sharppebble.com](mailto:support@sharppebble.com)